



1. The printer should be away from the water and avoid the sunlight, lightning and heat source direct exposure. Avoid any liquid, dust and metal particles contact with the printer.
2. The high humidity temperature (>45°C) or the low humidity (<20°C) should be avoided.
3. The high humidity (>85%RH) or the low humidity (<20%RH) should be avoided. The print quality.
4. Don't open the power of paper bin in printing process.
5. Using low quality storage long time print paper will reduce the print quality, even damage the printer.
6. If there is dirt at the print head, need to use a soft cotton or cotton swab to clean the print head. The print head should be being worn out and replaced.
7. Don't touch the print head and retainer directly in order to avoid damaging the print head because of static electricity.
8. Please do not touch the print head with a hardened object to avoid damaging the print head.
9. Please use the power up the battery before charging which can effectively prolong the print battery life.
10. Please use the power supply attached to the product, or else, it may be damaged by the power supply.
11. In the course of any repair, please disconnect the printer power supply and remove the printer battery immediately.
12. If you disassemble the printer, the company has the right to refuse the warranty on the printer.

1. If not to use the printer for a long time, please be sure to remove the battery from printer, and disconnect the charger's power supply.
2. The storage time of printing content is short using the ordinary thermal printing paper. If you want to print the long-term preservation, please select the long-term thermal printing paper.
3. The thermal printing paper should not be stored in high temperature, humidity environment, or direct sunlight. If its package has been opened, please place it in the dark place.

Diagram illustrating the back of the PS2 Mouse with various ports and buttons labeled:

- Serial port/PS2 (Optional)
- Power on/off button
- Paper bin cover
- Power indicator (Red)
- Bluetooth indicator (Blue)
- Charging indicator (Green)
- Out of paper indicator (Blue)
- Body
- Top cover
- Battery charging port
- Mini-USB Port
- Feed button

[illegible]

Noted: If the "charging indicator (green)" of printer flashing, indicating that the battery power of the printer has been less than 20%, please charge in time.

In power on status, press down the "Power on/off" button and hold on 2 seconds, the printer will beeps twice then power off, and all the indicators will go out.

When the printer is power off and the print paper is loaded correctly, press down the "Power on/off" button and "Feed" button simultaneously, after hearing a beep sound, release the two buttons, the printer will print a self-test page.

The self-test page contains information about the current status of the printer, settings and printing examples, such as the battery power, Bluetooth PIN, Bluetooth BDA, printing language, program version, font, etc.

In the normal working status, press the "Feed" button, the printer will feed paper.

After using a period of time, the printer's battery power will be consumed when the printer's green indicator light flashing slowly, indicating that the battery power has less than 20% and need to charge in time. This printer uses a charger for battery charging which output 12VDC/1A. Full charge takes about 4 hours.

240VAC, 50/60Hz) and insert the output plug into the power input socket of the printer(12VDC/1A). When charging, the green indicator will flash. When the battery power is sufficient or the battery is fully charged, the green indicator light goes out.

Open the cover of paper bin, draw out the head of paper roll, and put it into the paper bin in the direction shown below.



This series of printers can be equipped with Bluetooth 2.0 (SPP) or Bluetooth 4.0 (BLE) communication function. Bluetooth 2.0 can support the communication with the mobile terminal based on the Android system, and Bluetooth 4.0 can support the communication with the mobile terminal based on the Apple iOS system.

Bluetooth connection method: After power on the printer, use the mobile terminal or the other communication equipment with Bluetooth to search the printer, after selecting the corresponding printer, enter the Bluetooth PIN code to connect, after successful connection, can be used normally. Usually Bluetooth PIN code is "0000", for more details, please refer to the "self-test page".

The USB port can be set to "virtual serial port" or "print port" modes. Usually, the "print port" mode doesn't need to install the driver, but the "virtual serial port" mode need it.

The USB port working mode switching method: (1) Power off the printer and load paper correctly → (2) Press down the "Power on/off" button and "Feed" button simultaneously, loosen them until the printer finished "self-test page" printing → (3) Press down the "Feed" button for 2 seconds again to complete the switch operation (at the bottom of the "self-test page" will have a corresponding description).

Printer	1PC
Battery	1PC
Charger	1PC
USB cable	1PC
Paper roll	1PC
User's manual	1PC

The instructions of indicate light and buzzer signal

The printer is provided with a buzzer and 4 indicating lights for prompting the printer status, the indicator lights are used to indicate the current state of the printer, and the buzzer is used to indicate the change of the printer status.

The details are as follows

Indicator light	Indicator status	Printer status
Power indicator (Red)	ON	Power on status
	OFF	Power off status
	Flash	Standby status
Bluetooth indicator (Blue)	OFF	Bluetooth disconnected
	ON	Bluetooth connected
Out of paper indicator (Blue)	ON	Out of paper
	OFF	Enough paper
Battery charging indicator (Green)	Flash (Power on status)	Charging
	ON (Power off status)	Charging
	OFF	Battery power is full

Operation	Printer's action	Buzzer's action
Long press "Power on/off" button in the power off status	Power on	Beep 1 sound
Long press "Power on/off" button in the power on status	Power off	Beep 2 sound
Press "Feed" button in the power on status	Feeding paper	Beep 1 sound

[X] Note: If the standby time of the printer is set to 0 seconds, then the printer will immediately into the standby state after POST, and the power indicator light will still flashing.

Contents of this manual without the permission of the company shall be free to change and replication, we reserve the right to change the product, if user needs the product further information can contact directly with the supplier.