

## KIMP23 REMOTE PRINTER FOR CLASSES 210 AND 310 PORTABLE INSTRUMENTS

### Technical features

Dimensions (without protective cover): 85.5 mm x 150 mm x 55 mm

Weight (without protective cover): 400 g

Operating temperature: from 0 to 50 °C

Storage temperature: from -20 to +60 °C



### Print values during the measurement

- Press On/Off button of the printer to turn it on.
  - Press "Imprim" function key of the portable instrument on the measurement screen.
- Measurement results are printing on the ticket.
- Press On/Off button when printing is finished to turn the printer off.



In order to have a correct printing, infrared sensors of the printer and portable instrument must be face each other (see pictures above).



## KIMP23 REMOTE PRINTER FOR CLASSES 210 AND 310 PORTABLE INSTRUMENTS

### Technical features

Dimensions (without protective cover): 85.5 mm x 150 mm x 55 mm

Weight (without protective cover): 400 g

Operating temperature: from 0 to 50 °C

Storage temperature: from -20 to +60 °C



### Print values during the measurement

- Press On/Off button of the printer to turn it on.
  - Press "Imprim" function key of the portable instrument on the measurement screen.
- Measurement results are printing on the ticket.
- Press On/Off button when printing is finished to turn the printer off.



In order to have a correct printing, infrared sensors of the printer and portable instrument must be face each other (see pictures above).



### Change the paper roll

- Raise the upper part of the printer pulling up the transparent part.
- Put a new paper roll (both sides of the paper are different: the brightest side is the printed side and must faced the user).
- Pull up about 0.50 cm of paper.
- Close the upper part of the printer.



Transparent part  
Upper part



Paper location



Introduction of  
the paper roll



Paper properly  
introduced

### Change the batteries

- Remove the protective cover of the printer.
- Remove the batteries cover.
- Remove the used batteries.
- Put some new 1.5 V LR6 AA batteries observing proper polarity.
- Put the battery cover.



Batteries cover

### LED indications

The LED above the On/Off button has several meanings:

- Continuous green: printer turned on and ready to operate
- Sequence of one flash: paper is missing or there is not any paper out the printer → put a paper roll or let 0.5 cm of paper out
- Sequence of 2 flashes : thermal too hot → let the head cool down
- Sequence of 3 flashes : discharged → change batteries

### Change the paper roll

- Raise the upper part of the printer pulling up the transparent part.
- Put a new paper roll (both sides of the paper are different: the brightest side is the printed side and must faced the user).
- Pull up about 0.50 cm of paper.
- Close the upper part of the printer.



Transparent part  
Upper part



Paper location



Introduction of  
the paper roll



Paper properly  
introduced

### Change the batteries

- Remove the protective cover of the printer.
- Remove the batteries cover.
- Remove the used batteries.
- Put some new 1.5 V LR6 AA batteries observing proper polarity.
- Put the battery cover.



Batteries cover

### LED indications

The LED above the On/Off button has several meanings:

- Continuous green: printer turned on and ready to operate
- Sequence of one flash: paper is missing or there is not any paper out the printer → put a paper roll or let 0.5 cm of paper out
- Sequence of 2 flashes : thermal too hot → let the head cool down
- Sequence of 3 flashes : discharged → change batteries